

Wirecast Quick Start Guide

Thank you for using the Professional TallyLights™ Controller. This guide introduces the Installation, and operation of the TallyLights™ Controller and Wirecast software. Prior to installation and usage, please read the manual thoroughly. If you have any questions about the capabilities of the product, email our support team at support@tallylights.com or call (484) 593-2584

Wirecast Installation (Windows)

1. Use the included USB A-B cable to connect the TallyLights™ Controller to your computer.
2. Download the [Wirecast for Windows TallyLights™ Controller software](#).
3. Install the software using the wizard.

Wirecast Installation (Mac)

1. Use the included USB A-B cable to connect the TallyLights™ Controller to your computer.
2. Download the Wirecast for [Mac TallyLights™ Controller software](#).
3. Install the software by dragging the Tally-Lights 1.0 application to the Applications folder.

Wirecast Configuration

1. Start up the Wirecast TallyLights™ Controller software.
2. Use the configuration matrix to map the camera sources to the tally light output.
3. The setup is complete. The emitters will now trigger when set to Program and Preview through Wirecast.

Tally 1:	<input type="text" value="Not Assigned"/>	<input type="button" value=""/>
Tally 2:	<input type="text" value="Not Assigned"/>	<input type="button" value=""/>
Tally 3:	<input type="text" value="Not Assigned"/>	<input type="button" value=""/>
Tally 4:	<input type="text" value="Not Assigned"/>	<input type="button" value=""/>
Tally 5:	<input type="text" value="Not Assigned"/>	<input type="button" value=""/>
Tally 6:	<input type="text" value="Not Assigned"/>	<input type="button" value=""/>
Tally 7:	<input type="text" value="Not Assigned"/>	<input type="button" value=""/>
Tally 8:	<input type="text" value="Not Assigned"/>	<input type="button" value=""/>

Lock Tally Selection Always On Top

TallyLights.com
support@tallylights.com
(484) 593-2584 (9am-5pm EST)