

The logo for PTZ OPTICS features the letters 'P', 'T', and 'Z' each enclosed within a stylized camera aperture icon. The word 'OPTICS' is written in a clean, sans-serif font to the right of the aperture icons.

# PTZ OPTICS

General Quickstart Guide and Resource Locations

## Welcome to PTZOptics

The entire PTZOptics family wants to thank you for your purchase of one of our products.

We pride ourselves on offering a wide array of solutions with a focus on the right features to get your job done.

---

**If you ever have a problem with your PTZOptics camera, don't hesitate to reach out to our amazing support team.**

[support@ptzoptics.com](mailto:support@ptzoptics.com)  
<http://help.ptzoptics.com>

---

The following guide has been assembled to help you use your new PTZOptics camera how you want, as quickly as possible.

**In the table of contents on the next page, you'll see different ways you can interact with your PTZOptics camera.**

If you still have questions after reading through this guide, our always up-to-date user manual can be downloaded from our website.

<https://ptzoptics.com/resource-library/>

## Connecting Your Camera for the First Time

Your new camera has many options for connecting, powering, controlling, and streaming. This Quick Start Guide will help you understand how to use each of these different options.

1. Refer to the Table of Contents on the following page to find the various options available for your camera.
2. Read the instructions for the specific aspect of your camera that you want to use.
3. Refer to the page following the Table of Contents for an illustration of the back plate of your camera. Use this illustration to help determine which aspect of the camera you would like to use.
4. If you are having trouble using your camera, please refer to the Troubleshooting section of this guide.

### PTZOptics Quick Start Guide Video

We have videos to help you set up and use your camera. Scan the QR code below to visit our YouTube page:


<https://bit.ly/ptzsetup>



## Table of Contents


PTZOptics Studio Pro Camera Back Connection	4
USB Connection	5
HDMI Connection	6
IP Connection	7
3.5 Audio Connection	8
USB Connection	9
RTSP Streaming	10
RTMP Streaming	11
NDI®/Mx Streaming and Control	12
UVC Control	13
IP Control	14
IR Remote Control	15
Power Your Camera	16
Web UI	17
Find Software to Get Started	18
User Manual / General Resources	19
Troubleshooting	20

# PTZOptics Studio Pro Camera Back Connection

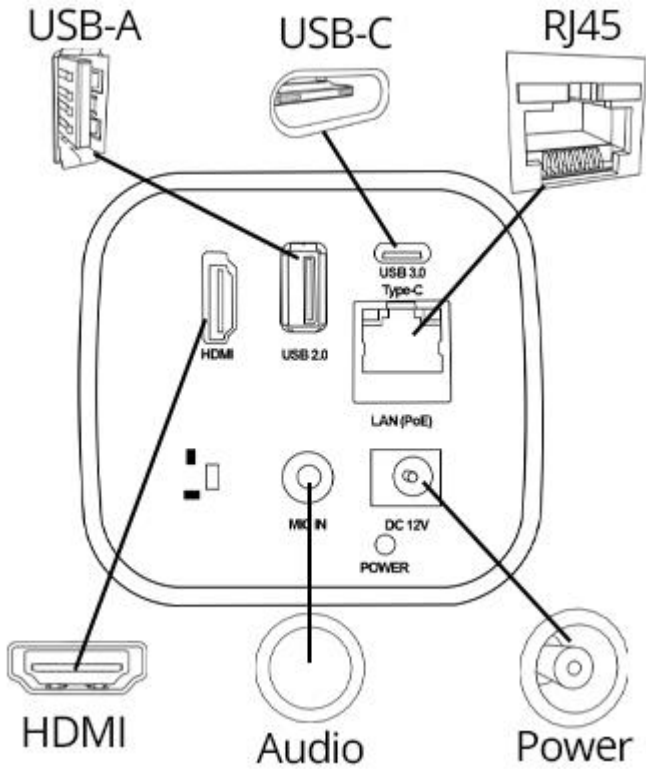

## USB Connection

Your camera comes with a USB connection. Connect one end of the included USB-C cable into your camera. Connect the other USB-C side to a PC or to the device of your choice.

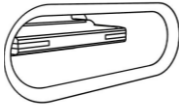


A USB-C Connector

---


The USB connection of your camera allows for camera control within certain software. Please see the user manual for more details.

---

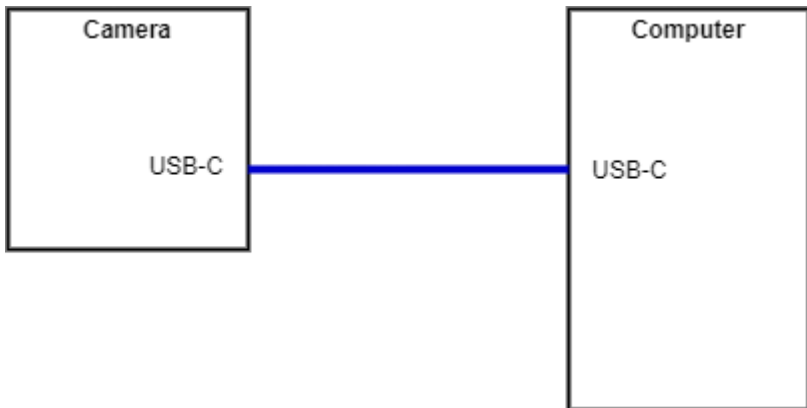


## HDMI Connection

Your camera includes an HDMI connection. Connect one end of your HDMI cable to the camera, and connect the other end to the device of your choice. (Cable not included)

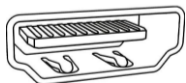

To achieve best results, we recommend using an HDMI 1.4 or better cable. HDMI cables can be run up to 49 feet (15 meters).

1. Connect the male end of the HDMI cable to the female connector on the camera.
2. Connect the other male end of the HDMI cable to the female connector on the device of your choice.
3. Power on the camera.
4. Select the camera within your device of choice.

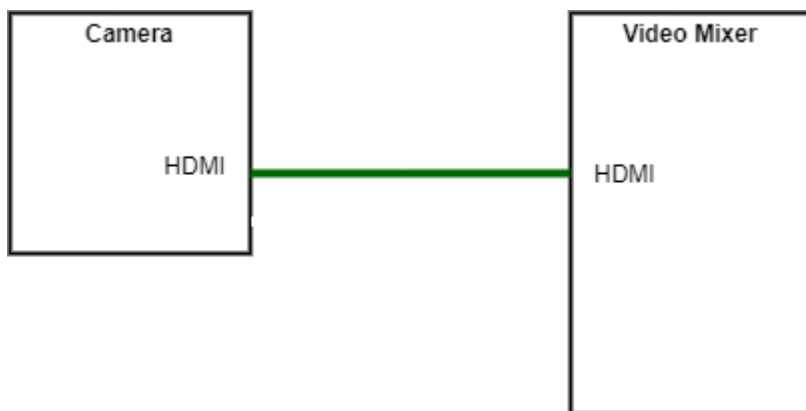

## IP Connection

Your 3rd Generation PTZOptics camera is set to DHCP by default. This means that your camera receives an IP address from a DHCP server, typically your router.

**You can discover your camera's network address, using our IP Address Setting Tool:**

<http://ptzoptics.com/setup>

**Once you download and open the upgrade tool, click on the 'Search' Function on the opening tab to find your camera.**

You can also set the camera to a static IP with the included IR Remote Control.

Aim the IR remote at your PTZOptics camera and press in sequence  
**'#' + '\*' + '#' + '0'**  
(i.e. Pound, Star, Pound, 0)

This will set your camera to the IP address:  
192.168.100.80




### 3.5mm Audio Connection

Your camera comes with a 3.5mm audio connection, which allows you to embed audio on your video stream.


Connect a 3.5mm audio cable (not included) to the 3.5mm audio in port of your camera. Connect the other end of the cable to the device of your choice.

Note: The 3.5mm audio connection requires Line Level audio in order to function.

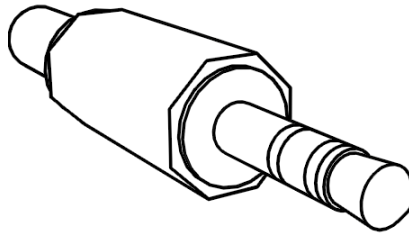


## USB Connection

Your camera comes with a USB connection and a USB-A to USB-C cable. Connect the USB-A side into the USB port of your camera. Connect the USB-C side to the included light.

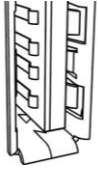

A USB-A connector

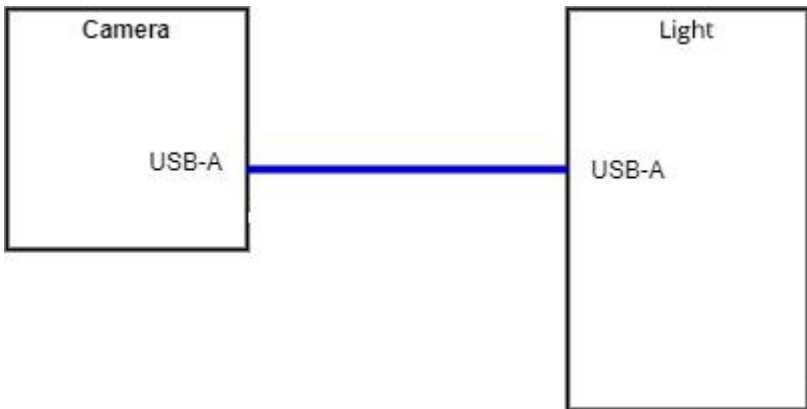

## RTSP Streaming

Your camera is able to send an RTSP stream for viewing video through a LAN or Internet connection.

Using VLC or another RTSP enabled video program, type the following string into your network streaming section:

Stream 1 (HD):  
rtsp://[IP ADDRESS]:554/1

Stream 2 (SD):  
rtsp://[IP ADDRESS]:554/2

If you do not know the IP address of your camera, refer to the IP Connection section of this guide.

## RTMP Streaming

Your camera can send two RTMP(S) streams. To use your camera with an RTMP stream, you will need a Stream URL & Stream Key, which you receive from a CDN or from the social network to which you want to stream.


Once you have the Stream URL & Stream Key, type the IP Address of your camera into your web browser. You will be prompted for the credentials for the camera Web UI. These credentials are admin/admin by default.

Once you are logged into the Web UI of your camera, navigate to the Streaming Settings page.

In the RTMP(S) Settings section, you will enter the Stream URL & Stream Key you received from the CDN or social network.

**Make sure that you turn your RTMP stream “On” by enabling the appropriate stream.**

RTMP(S) Section of the Web UI:

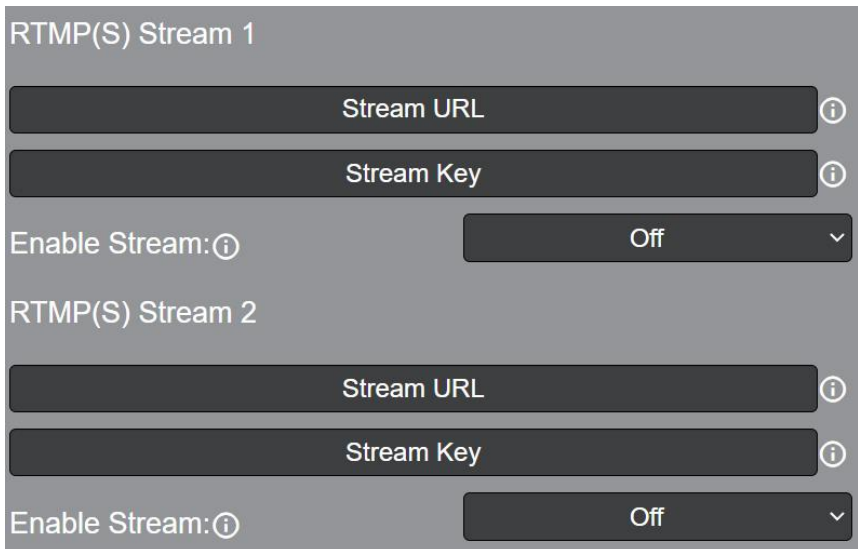

The screenshot displays the RTMP(S) settings interface. It features two identical sections for 'RTMP(S) Stream 1' and 'RTMP(S) Stream 2'. Each section contains three input fields: 'Stream URL', 'Stream Key', and 'Enable Stream'. The 'Stream URL' and 'Stream Key' fields are dark grey with white text and include an information icon (i) on the right. The 'Enable Stream' field is a dropdown menu with the text 'Off' and a downward arrow, also accompanied by an information icon (i).

## NDI® |HX Streaming and Control

Your camera is capable of running NDI® | HX. NDI® | HX allows for efficient distribution of audio and video on a LAN.

If your camera has the NDI® | HX logo, then NDI® | HX is already enabled. If your camera does not have the NDI® | HX logo, go to <https://store.newtek.com/ndi-hx-upgrade-for-cameras.html> to purchase a license.

To get started with NDI® | HX, download and install the NDI® | HX tools: <https://ndi.tv/tools/#download-tools>

Once the NDI® | HX tools are installed, open Studio Monitor. Studio Monitor allows you to view all NDI® | HX feeds available on your LAN.

Right-click on the Studio Monitor screen. Your camera should be listed.

NDI® | HX cameras need to be connected to a router with IGMP snooping level 2 or 3 running as a service.

## UVC Control

Your camera is USB Video Class (UVC) compliant. This means that you can control your camera's **pan, tilt, and zoom as well as change camera settings** through your USB connection.

Most video software offers some form of UVC control.

To find software designed for your camera, please refer to the Find Software to Get Started section of this guide.

## IP Control

You can control all functions of your camera through Internet Protocol (IP). Your camera must be connected to an active LAN or Internet connection to be controlled through IP. Please see the IP Connection section of this guide for more information.

### Web UI

You can control the camera through the Web UI. Please see the Web UI section of this guide for more information.

### Studio Monitor

If you have NDI®HX installed on your camera, you can use NDI®HX Studio Monitor for basic pan, tilt, zoom, and focus control. Please see the NDI Streaming and Control section of this guide for more information.

### VISCA over IP

Your camera can be controlled through PTZOptics VISCA over IP. Please refer to your manual.

### Http commands (cgi/bin)

Your camera can accept HTTP CGI/BIN commands. Please refer to your manual.

### IP Controller

PTZOptics sells IP controller joysticks to give you more control over your camera.

## IR Remote Control

Your camera comes with an IR Remote Control. The IR Remote Control is detailed in the User Manual.

### Control:

**You can use the IR Remote Control to control your camera's pan, tilt, focus, and zoom.** Pressing on the OSD button, will bring up the On-Screen Display where you can adjust all camera settings.

### Quick Set Features:

Your IR Remote control contains some codes that allow you to set the IP address or change the IP address to DHCP. Please refer to the user manual for more information.


### Multiple Cameras:

The IR Remote Control can control up to four independent cameras.



## Power Your Camera

Your camera can be powered through DC power (with the included adapter), Power over Ethernet (with a switch or router rated for 802.3af), or through USB using the included USB cable.

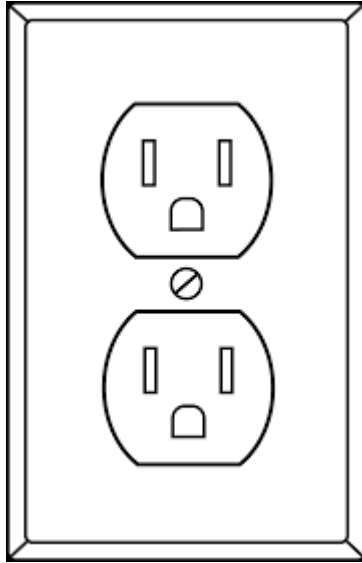

## Web UI

**You can access the Web UI of your camera by entering the camera's IP address into your web browser. The default credentials are admin/admin.**

The left panel of the Web UI includes links to control various aspects of your camera and buttons to control pan, tilt, zoom, and focus. Presets can be created and called. You can also change speed settings and open the On-Screen Display (OSD) menu. If applicable, focus can be locked or unlocked through the drop-down menu.

The Live section of the Web UI is the first page you will see after entering your credentials. This contains a live feed of the camera that is viewable through Internet Explorer.

The Video section of the Web UI allows you to adjust aspects of the video stream(s) available on your camera.

The Image section of the Web UI allows you to control: brightness, saturation, hue, contrast, and sharpness. You can also flip the video image on a horizontal and/or vertical axis.

The Audio section allows you to adjust the audio features of your camera.

The System section allows you to define new login credentials for your camera, and reboot the camera.

The Network section is where you can change the network settings of your camera and enter RTMP MRL(s).

The Information section shows identifiers for the camera.

## Find Software to Get Started

PTZOptics provides a wide range of software to help you use your camera.  
All software is available at:

<http://ptzoptics.com/setup>

### Camera Control App

Take control of your USB-connected camera with the Camera Control App.

### Open Source IP Connection Software

Use our Open Source IP connection software to control your camera and adjust settings.

### IP Address Setting Tool

The IP Address Setting Tool finds your camera on the network. It is also the **tool, which you will use to upgrade your camera's firmware.**

### OBS Plugin

Do you use OBS Studio? If so, we have a plugin to enable control of our cameras. Try it out!

### iOS App

Control your camera through your iOS device.

### Android App

Control your camera through your Android device.

## User Manual / General Resources

A general online user manual is available at: <https://ptzoptics.com/user-manual/>

The user manual for your specific camera is available at:  
<https://ptzoptics.com/resource-library/>

## Troubleshooting

For all other questions, please reach out to the PTZOptics Support Department at [Support@PTZOptics.com](mailto:Support@PTZOptics.com)

